

## **Ford Focus MK2**

### **Rear Lower Chassis Link Bar (Pair)**

**(Also needs Bar-133 Rear Lower Chassis Panel)**



**Tools Required: 18MM & 14MM  
Sockets 19MM Spanner**



**Job time approx. 20-45 Mins**

## **Step 1.**

**Lift your car either on a car lift or using a jack and jack stands.**

## **Step 2.**

**Using a 19MM spanner hold the front side of the bolt still while you remove the 18MM nut on the back side.** (If the bolt moves your rear tracking will be out)



## Step 3.

**Put the supplied hex head bolts through the marked holes before installed onto the car**



**Put the brace onto the two bolt treads then put the nut from step 2 back on top of the brace making sure to hold the head of the bolt with the 19MM spanner while tightening the nut.**




BAR-135 Rear Lower Chassis Link Bar (pair)



## **Step 4.**

**Using the supplied bolts insert into the frame of the car and twist the bolt so it holds its self in the chassis.**

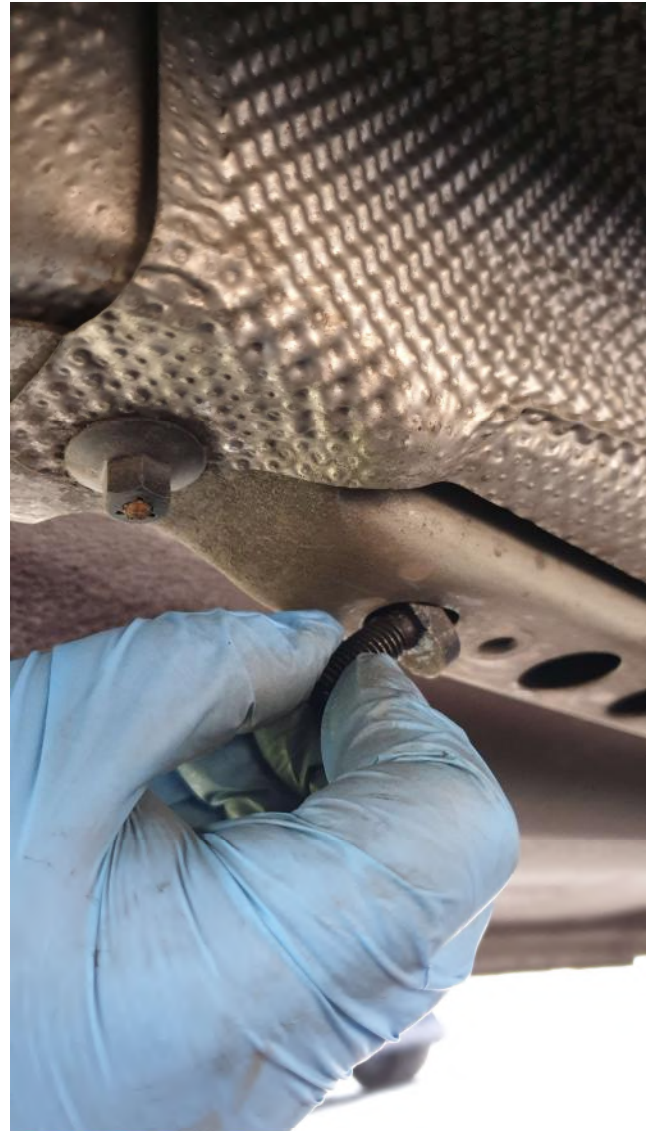

BAR-135 Rear Lower Chassis Link Bar (pair)





## **Step 5.**

**Using the bolts previously installed in the chassis and on the Chassis panel hand tighten the 4 included nuts, once all are installed then snug down all the bolts**



BAR-135 Rear Lower Chassis Link Bar (pair)

